





Quick start guide

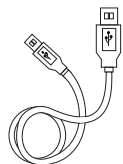

USB Cable

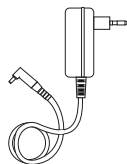

AC power adapter

 


Photo Display Stand

Frequently Asked Questions

- Q Is the LCD screen touch-enabled?
A The LCD screen is not touch-enabled.
Use the keys in the back to control the Photo Display.
- Q After copying photos, how can I check if the photos are already stored inside?
A The photos are copied after the screen confirms with "photo copied" message.
You may view pre-stored photos.
- Q Can I switch between different photo slideshows by using different memory cards?
A Yes, the Photo Display will show the slide show of photos stored in the card currently connected.
- Q Can I use the Photo Display to delete photos on memory cards?
A Yes, it supports operations to delete photos on external devices.
- Q Can I print photos from Photo Display?
A No, it does not support direct photo printing.

Contact

JOB0 AG
D-51645 Gummersbach
Koelner Strasse 58
Tel.: +49 (0)2261 / 545-0
Fax: +49 (0)2261 / 545-0
Mail: info@jobo.com
www.jobo.com

Digital Photo Display Quick Start Guide


PDJ007



- ☐ Connection
- ☐ Setup
- ☐ View images
- ☐ Package Contents
- ☐ Frequently Asked Questions


1.Connect

1.1.Attach Stand

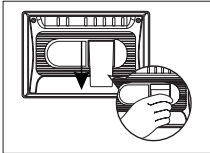

- Place the stand in the socket.

1.2.Connect Power

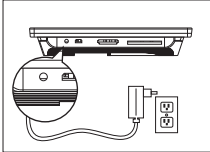

- Connect the supplied power cable from the photo frame to a power outlet

2.Setup

Turn on the Photo Display

 


Photo Display (top)

- Push power button on the back of the frame



Photo Display (front):Startup screen

Choose Language



Photo Display (front):Startup screen



Photo Display (front):Startup screen
Icons indicate position of buttons found on the back of the frame


- Press ▲, ▼ and OK keys to go to settings.

- Press ▲, ▼ keys to select LANGUAGE settings, press OK key to enter
- Press ▲, ▼ keys to select Deutsch, Français, Nederlands, Italiano, Portugues
- Press OK key to set your language
- Use ⏮ key to return and exit SETUP

Control keys


Operate your Photo Display by pressing the control keys on the back. LCD display shows the function icon for each key at the same position.

- Previous/Left
- Up
- Ok
- Next/Right
- Down
- Menu

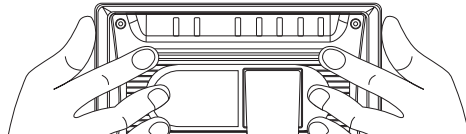

3.View Images

View pre-stored photos

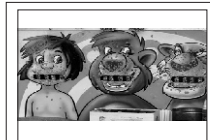

Browse mode
Manual viewing of photos one-by-one



Thumbnail mode
List of all photos




Slideshow mode
Automatic transition of photos

- There are 3 view modes for you to choose.
- Press ▲, ▼ key to select PHOTO
Press OK key to enter
- Press ▲, ▼ keys to internal memory
Press OK key to enter
- Press ▲, ▼ keys to select ALBUM
Press OK key to enter into Thumbnail mode
then press ► key to enter Slideshow mode

View photos from your memory card

Photo Display (underside)

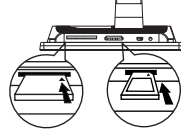

Insert the memory card
Use right slot for Compact Flash® card

Insert the memory card
Use left slot for Memory Stick/Secure Digital/MMC/xD card



Photo Display (front):Thumbnail mode
After a few seconds the photos stored on your memory card will appear on the screen

- Press ▲, ▼ key to select ALBUM
Press OK key to enter into Thumbnail mode
then Press ► key to enter Slideshow mode

Feature: If the memory card is inserted before the power is ON, Slideshow will automatically start.


Copy one or copy all photos from your memory card



Photo Display (front)
Thumbnail mode



Copying photo mode

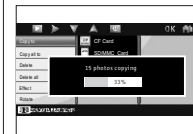

Copied photo mode


- Use +/- key to select photo
- Press OK key to copy photo
- Press ▲, ▼ key to select copy one or copy all from inserted memory card

- Press OK key to copy
- Photo frame will keep a resized copy of the photo until internal memory is full

Delete one or Delete all photos from digital Photo Display



Photo Display (front)
Thumbnail mode

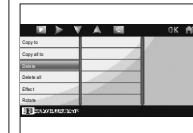

Delete photo mode



Delete finish photo mode

Delete photo mode

- Use OK key to select photo
- Press OK key to delete photo
- Press ▲, ▼ key to select Delete or Delete all from inserted memory card
- Press OK key to delete, then system will show finished

Set Time and Date function



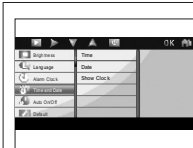


Photo Display (front):
Set Time/Date mode

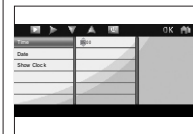

Set Time mode

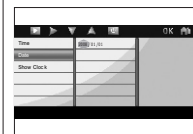

Set date mode

- Press ▲, ▼ keys to select SETTINGS
Press OK key to enter
- Press ▲, ▼ keys to select Time and Date
Press OK key to enter
- Press ▲, ▼ keys to select Time to setup
Press ► key to set hours, minutes and seconds
Press ⏮ key to return to main menu and exit SETUP

- Press ▲, ▼ keys to select SETTINGS
Press OK key to enter
- Press ▲, ▼ keys to select Time and Date
Press OK key to enter
- Press ▲, ▼ keys to select Time to setup
Press ► key to set year, month and day
Press ⏮ key to return to main menu and exit SETUP

The PDJ007 will turn on and off automatically at your pre-set time

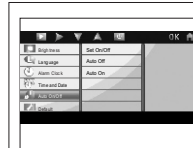


Photo Display (front):
Set Auto On/Off mode



Set On/Off mode



Auto Off time mode

- Press ▲, ▼ keys to select SETTINGS
Press OK key to enter
- Press ▲, ▼ keys to select Auto On/Off
Press OK key to enter
- Press ▲, ▼ keys to select Set On/Off to switch
Press OK key to select On or Off then press enter

- Press ▲, ▼ keys to set Auto On or Auto Off time
- Press ⏮ key to return to main menu and exit SETUP